

 
Ph 03 9383 1399

[Home](#)[Our Products](#)[Our Profile](#)[Specification Sheets](#)[Contact Us](#)[Return to Prime Products](#)

Prime - PACDT2 - Music Source




FRONT PANEL Am / Fm Tuner and CD player



1. Tuner display
2. Memory Keys
3. Shift Key
4. CD display
5. Repeat Key
6. Random Key
7. Program Key
8. CD Power On / Off key
9. Power On / Off switch
10. AM/FM Selection Key
11. Frequency Up / Down Key
12. Scan Key
13. Set Memory Key
14. Previous Key
15. Next Key
16. Play / Pause Key
17. Stop / Eject Key

 REAR PANEL



1. Mains input socket
2. AC fuse holder
3. Earth connection screw
4. Mains Voltage 115V / 230V Switch
5. CD output level control
6. CD output (2x RCA Phono)
7. CD / Tuner Mix output (2x RCA Phono)
8. Tuner output (2x RCA, Phono)
9. Tuner output level Control
10. FM antenna input
11. AM antenna input
12. 12V dc power supply terminals



Sully Sound © Copyright 2014